




Setup and Installation

The following steps will walk you through the installation process.


STEP1 : Power On

Switch the power button to the on position.

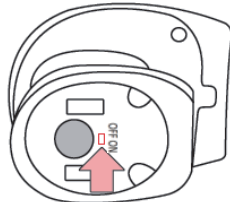

STEP2 : Charge

Connect the power supply cable to the bottom of the MS842RP and to an electrical outlet. Charge for at least 5 hours.

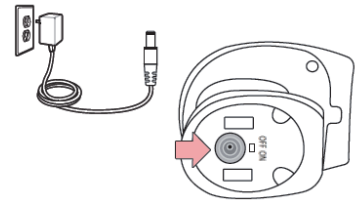

STEP3 : Scan Dongle

Scan the barcode on the USB Dongle.

STEP4 : Connect Dongle To Host

Plug the USB Dongle to a free USB port of a host computer. The MS842RP is now ready to use.

Test and Finish

Open a word processing program such as Microsoft Word or Notepad on your host. Now scan the following barcode:

If the word "Unitech" appears on the screen you have successfully installed your scanner.

Settings and Configuration

The following section covers the most common configuration settings for your MS842RP scanner. For additional configuration options please visit unitech.scanners.com/MS842RP and select the "Download" tab. You will find the user's manual and a variety of other resources.

Dongle Mode

SPP	HID*

Trigger Mode

Manual Trigger-Normal *

Presentation Mode

Mobile Phone Read Mode

Hand Held Scanning - Mobile Phone

Presentation Scanning - Mobile Phone

System setting

Factory Default

Display F/W

Power Saving (For HID Only)

Enabled	Disabled

Beep

Beep on Good Read (Toggle)	Beep on Connection Change (Toggle)

* : Default Option

Operation Mode

wedge



Batch



Auto*



Output data Transmit + Buffer Erase

Batch Mode :

Batch Send



Erase Previous Entry



Enter Batch Buffer Erase



Erase



Auto Mode :

Erase Previous Entry



Enter Auto Buffer Erase



Erase



Scanning Reconnect Time (When connection lost)

10 minutes



20 minutes



30 minutes



1 hour



Dongle HID Keyboard Language

US English



UK English



Swiss



Swedish



Spanish



Norwegian



Italian



German



French



ALT Mode



Danish



Partial ALT



Japanese



* : Default Option

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.

Version 1.0
401239G